

WinTool Interface for Mastercam

Version 2.5 for Mastercam Version X4, X5

Changes

2.5

- Added new WT-ToolExport module
- Added WT-MasterCAM-Interface configuration window
- Minor update of cutting condition selection window
- Fixed issue with installer

2.4

- Support of Mastercam X5 and X4 (updated)
- Cutting condition selection window during tool import
- Pre-selection of cutting conditions after import of first tool
- Mastercam tool type mapping can be done during transfer if missing
- Transferring tool holder description to field “chuck”
- Outer Dia for MC13 is transferred correctly
- WT-MakeList 3.7 with better selection method of Material and O-Number
- Improved error messages
- Updated transfer file
- Updated manual
- 30 day trial license options
- *WinTool* Professional must be started when using the WT-MasterCAM-Interface

2.3 - 3rd Release

- Support for *WinTool* 2009 and *WinTool* 2010 (updated ToolExport and MakeList)

2.3 - 2nd Release

- Support for Mastercam X4

2.3

- Manual completely reworked
 - Cutting conditions no longer negative, direction corrected
 - ae, ap values supported
 - Tool number management and messages optimized
 - Level numbers for tool contours >100'000'000
 - Update to WT-MasterCAM-Interface 2.3.2.5721
 - Mastercam contour display always correct now
 - Better support of custom cutter DXF
-

-
- Mastercam values exported to WT-MakeList window
 - Support for Mastercam X3

2.2

- First Release for Mastercam X2